



RACER250 Evo

- 12-inch 250 W RMS battery-powered portable speaker with USB/SD/BT 5.0 drive + talkover + effect
- Supplied with 2 antennas (RACER-GoAnt) - Supplied without receiver (RACER-GoMod Evo) -
- Supplied without GO-Hand microphone

Référence: H11667

829,00 € inc. VAT



- + **Exclusive design**
- + **Long autonomy**
- + **Bluetooth® 5.0 reader**
- + **Bluetooth® TWS wireless stereo**
- + **Slot in for integration of a Micro UHF receiver module (optional)**
- + **UHF microphone (optional)**
- + **UHF diversity**
- + **Talkover on all microphones**
- + **Room effect**
- + **USB DC5V 2A for charging your smartphone**
- + **Compatible with Go-Hand, GoLava, GoHead & Go-Body**

- Loudspeaker: 12" speaker + 1.35" compression driver total impedance 4 Ohms
- Power: Class D amplifier 250 W RMS/500 W max.
- Frequency response: 50 - 20 kHz
- Sound pressure: 125 dB SPL max
- USB key and SD card reader, Bluetooth® 5.0 receiver
- Supplied with infrared remote control
- Dimensions in mm: 614 x 350 x 395
- Net weight with batteries: 22.5 kg
- 2 slots for integration of an optional UHF microphone receiver module - **Bluetooth® TWS:**
- Transmission of Bluetooth audio signal in stereo to a second RACER
- Talkover selectable for all microphone channels
- Adjustable room effect

- Finish:

- Molded polypropylene enclosure, metal grille
- Storage compartment for 2 microphones and cables
- Retractable handle and transport wheels
- C36 base for stand - **Battery:**
- 2 x DC 18 V 7 Ah for the system, wired in series
- Autonomy : 5 hours on average, depending on volume
- Charging time approx. 8 hours
- "Battery connect" switch for battery backup during storage
- Dimensions: 150 x 95 x 97 mm
- Weight: 3.075 kg

- Power management:













- LED display shows charge level
- Simultaneous charging and use
- Automatic cut-off if charge level too low

- **Optional HF microphone:**
- 16-channel UHF diversity receiver
- GO series microphones
- Choice of F5, F6 or F8 frequency bands

Caractéristiques

Brand	Audiophony
Power	250 W rms
SPL max (@1m)	125 dB
Model size	12"
Function	Battery, Bluetooth, Bluetooth TWS, Mounting 36 mm, Room effect, SD, Talkover, USB, Wireless remote control
Family	RACER

Références compatibles

 <p>COV-Racer250 145,00 € inc. VAT Réf: H10791</p>	 <p>RACER-GoAnt 6,00 € inc. VAT Réf: H11412</p>	 <p>RACER-GoModF5 evo 99,00 € inc. VAT Réf: H11668</p>	 <p>RACER-GoModF8 evo 99,00 € inc. VAT Réf: H11669</p>	 <p>GO-Hand-F8 89,00 € inc. VAT Réf: H9989</p>
 <p>GO-Hand-F5 89,00 € inc. VAT Réf: H11030</p>	 <p>GO-Body-F8 69,00 € inc. VAT Réf: H9990</p>	 <p>GOHead 42,00 € inc. VAT Réf: H9991</p>	 <p>GOLava 32,00 € inc. VAT Réf: H9992</p>	 <p>GO-Body-F5 69,00 € inc. VAT Réf: H11031</p>
 <p>RACER-GoModF6 evo 99,00 € inc. VAT Réf: H11670</p>	 <p>GO-Body-F6 69,00 € inc. VAT Réf: H11672</p>			

Galerie photos





audiophony

Do not let your battery discharge. If the appliance won't be used for a long time or the red LED is ON, it means the battery is empty. Please plug the power cable and turn the BATTERY CONNECT switch ON. If there is no light for a 24-hour and the green indicator LED is on, the charge is complete. PLEASE USE ORIGINAL BATTERIES!

No flames, sparks, or other discharges. Do not use the device in wet areas or near water. Do not use the device in rain or snow. Do not use the device in a car or other moving vehicle. BATTERY CONNECT switch ON. If the indicator light is on, the charge is complete. If the indicator light is on, the charge is complete. PLEASE USE ORIGINAL BATTERIES!

REUSE OLD BATTERIES RESPONSIBLY

2 x 12V 5Ah

DANGER
RISK OF FIRE, ELECTRIC SHOCK, OR EXPLOSION
DO NOT OPEN

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



RACER250 Evo

DIGITAL PLAYER

audiodyssey

CH 1 LEVEL CH 2 LEVEL CH 3 LEVEL

MASTER VOLUME

BASS TREBLE

POWER

CHARGE

BATTERY LEVEL

CE

audiodyssey

Do not let your battery discharge.

If the equipment is not used for a long time or the red light (LED) is flashing, recharge the battery, please plug the power cable and turn the BATTERY CONNECT switch ON.

When the red light turns for a full charge and the green indicator LED will be on and the charge is complete. PLEASE USE ORIGINAL BATTERIES!

No battery packs with lithium discharge.

To prevent fire and other possible damages do not use the original lithium-ion battery pack or other battery packs. Refer to the manual or audiodyssey website for our BATTERY CONNECT part No.

If your equipment has found your own charge completely or has overcharged, turn off the power pack in 30-45 min charge with the LED BATTERIES CONNECTION.

2 x 18V 7Ah

DANGER
Risk of fire and explosion if not used properly.

CAUTION
Risk of electric shock if not used properly.